

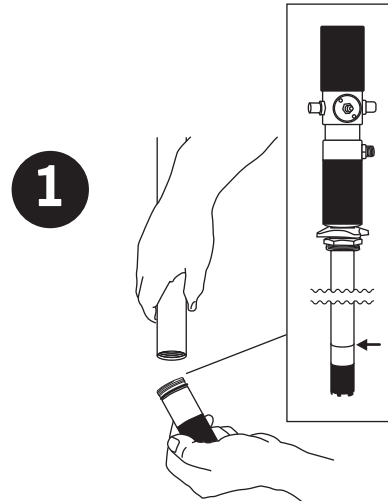


HOW TO EXTEND A PUMP TUBE

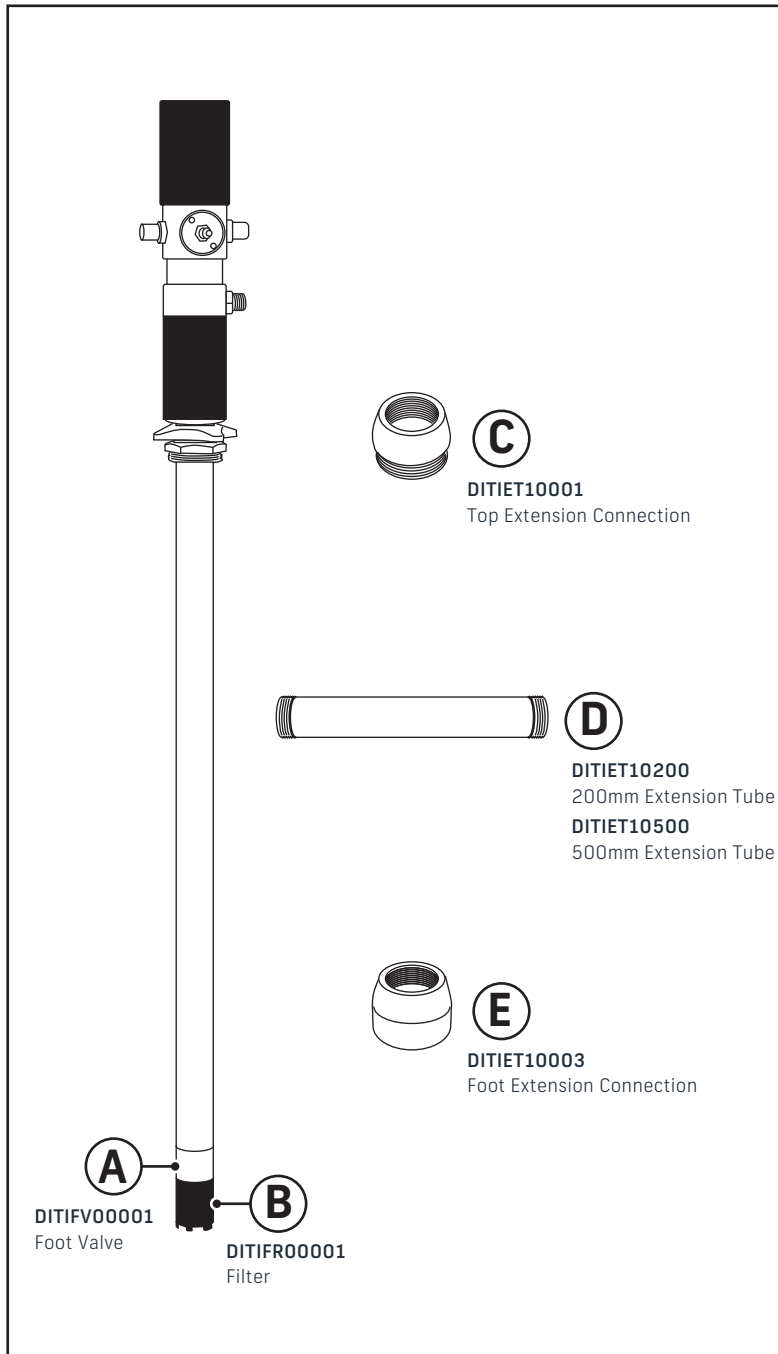


Remove assembly **A** **B***
from your pump and set aside


*KEEP **A** **B** TOGETHER

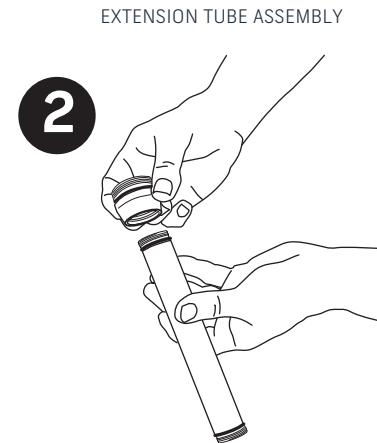


Connect components
C and **D**

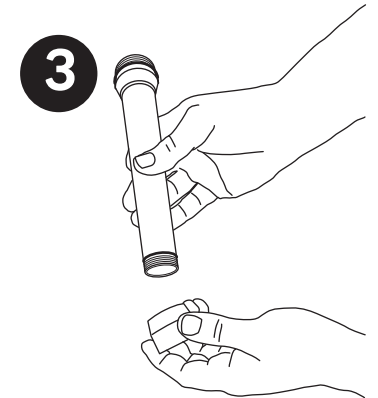


Connect assembly **2**
to **E**

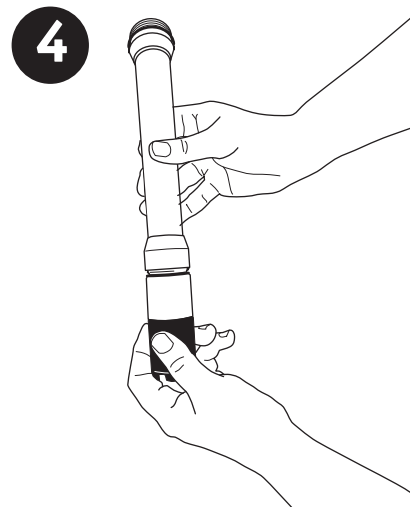

Connect assembly **3**
to **A** **B**

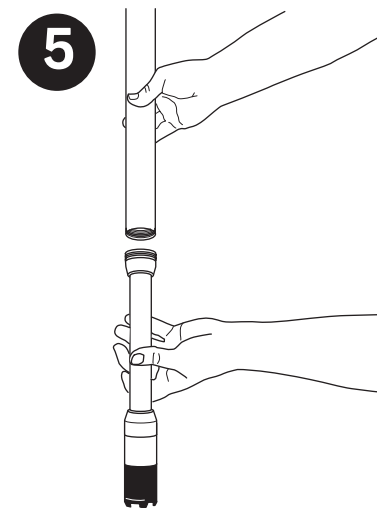

Connect completed
assembly **4** to pump

 **NOTE**
Ensure **A** **B** attach to
the end of suction tube

STM AUSTRALIA
1/615 WARRIGAL RD
ASHWOOD VIC 3147
AUSTRALIA

T 1300 131 531
F 1300 308 508
E ENQUIRIES@STM.NET.AU
W WWW.STM.NET.AU